



Temizlik ve Bakım
Talimatı




Montaj
Videosu

Shell-WP/N/P Montaj Manueli

Lütfen ileride başvurmak üzere saklayınız ve kullanmadan önce dikkatle okuyunuz.


İçerik

a) 1 ad. Shell Kabuk

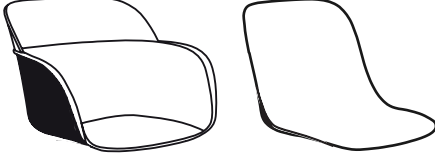

☐ Shell Plastik Kabuk

☐ Shell Plastik Kabuk

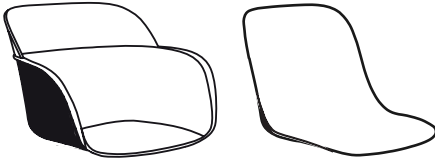

☐ Shell Döşemeli Kabuk

☐ Shell Döşemeli Kabuk

b) 1 ad. Ayak



☐ Shell WP Ayak



☐ Shell N Ayak



☐ Shell P Ayak

c) 4 adet M6 Düz İnce Pul



d) 4 adet


M6x20 Cıvata (Döşemeli Kabuk İçin)



M6x16 Cıvata (Plastik Kabuk İçin)




Matkap Ayarı: Montaj işlemi için matkabın hız ayarı 1. seviyede, tork ayarı ise 12'den yüksek olmayacak şekilde ayarlanmalıdır. Bu ayarların dışına çıkmak, ürüne zarar verebilir.

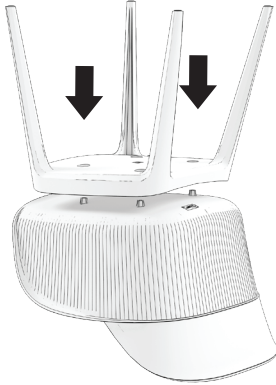

- 1** Kabuk (a) uygun bir zemine ters şekilde yerleştirilir. Ayak (b) üzerinde bulunan üçgen işaretler kabuğun ön tarafına hizalanarak kabuktaki vidalara oturtulur.



- 2** 4 adet M6 pul (c), ayağın (b) altında bulunan boşluklara yerleştirilir.

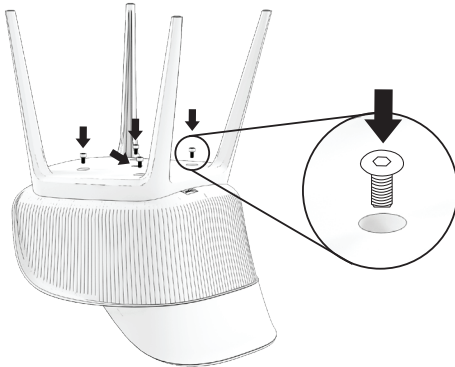

- 3** M6x20 ya da M6x16 4 adet cıvata, pul yerleştirilen kısımlara 4 numara alyan veya 4 numara alyan uçlu şarjli matkap ile sabitlenir ve kurulum tamamlanır.





Care and Cleaning
Instructions



Assembly
Video

Shell-WP/N/P Assembly Guide

Retain for future reference. Read carefully before use.


Content

a) 1 pc. Shell



☐ Shell Plastic

☐ Shell Plastic

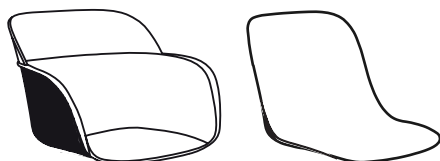

☐ Shell Upholstered

☐ Shell Upholstered

b) 1 pc. Leg



☐ Shell WP Leg



☐ Shell N Leg



☐ Shell P Leg

c) 4 pc. M6 Washer



d) 4 pc.


M6x20 Screw (For Upholstered Shell)



M6x16 Screw (For Plastic Shell)




Drill Setting: For the assembly process, the drill's speed setting should be at level 1, and the torque setting should not be higher than 12. Exceeding these settings may damage the product.

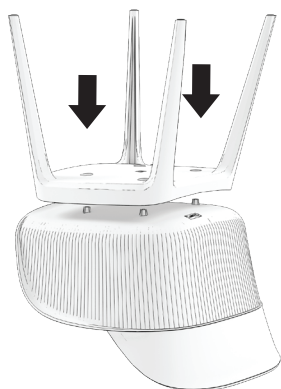

- 1 Place the seat (a) upside down on a suitable ground, and place the leg (b) below the seat. Triangle mark should face the front of the seat. Pass the holes of the seat legs to the screws locations under the seat.



- 2 4 pieces of M6 washer (c) are placed into the slots standing (b).

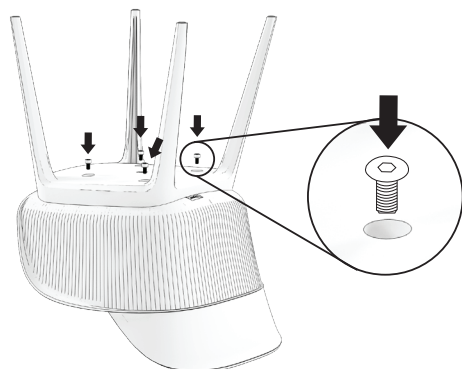

- 3 Four screws, either M6x20 or M6x16, are fastened to the areas where the washers have been placed using a 4mm hex key or a cordless drill with a 4mm hex bit, completing the installation.

