



Temizlik ve Bakım
Taliatı



Montaj
Videosu


Maroon Masa Montaj Manueli

Lütfen ileride başvurmak üzere saklayınız ve kullanmadan önce dikkatle okuyunuz.

İçerik



a) 1 adet Masa Tablası

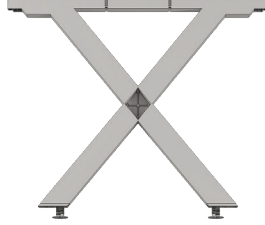

b) 2 adet Masa Ayağı




d) 8 adet vida
3.9x18



e) 4 adet RSYB vida
3.9x22



f) 18 adet vida
3.9x38

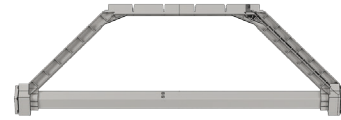


c) 1 adet Ayak Destek Parçası




g) 1 adet Alyan




h) 8 adet Pul

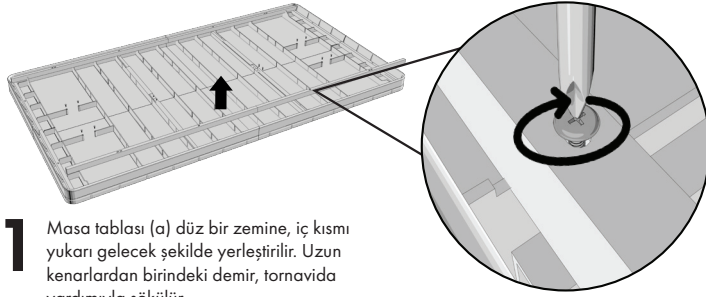


1 Masa tablası (a) düz bir zemine, iç kısmı yukarı gelecek şekilde yerleştirilir. Uzun kenarlardan birindeki demir, tornavida yardımıyla sökülür.

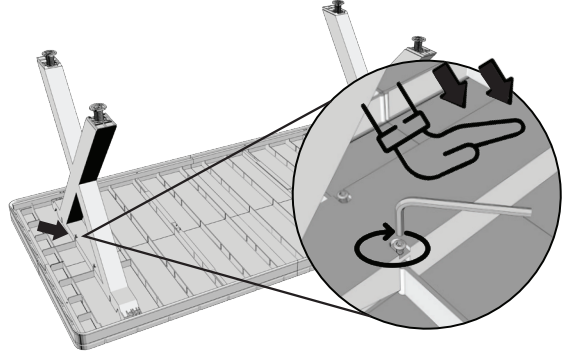


2 Masa ayakları (b) tabla üzerinde şekilde belirtilen kısma yerleştirilir, vidaların takılacağı alanda bulunan etiketin üzerine baskı yaparak vida deliklerinin örtüşmesi sağlanır ve 4 adet 3.9x18 vida (d) alyan (g) ile sabitlenir. (Bu işlem her iki ayak için uygulanır.)

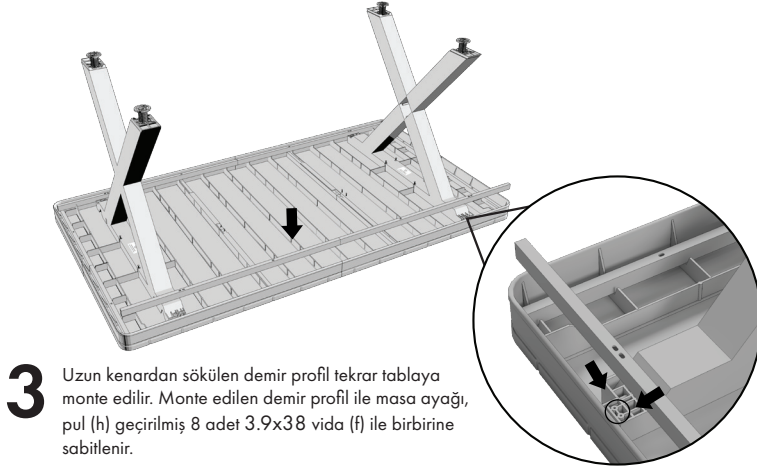


3 Uzun kenardan sökülen demir profil tekrar tablaya monte edilir. Monte edilen demir profil ile masa ayağı, pul (h) geçirilmiş 8 adet 3.9x38 vida (f) ile birbirine sabitlenir.

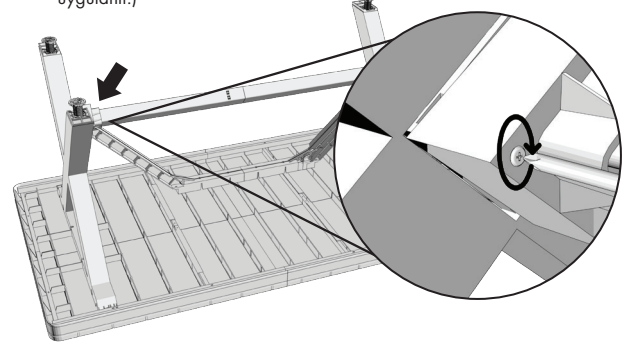

4 Ayak Destek Parçası (c) ayakların iç kısmında, merkez noktasında bulunan yuvalara yerleştirilir. Ayak Destek Parçası'nın şekilde gösterilen kısmı 3 adet 3.9x38 vida (f) ve tornavida ile sabitlenir. (Bu işlem her iki ayak için uygulanır.)

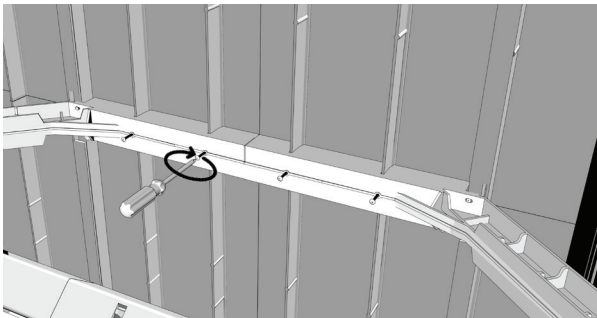

5 Ayak Destek Parçasının tabla ile temas ettiği noktalar 4 adet vida 3.9x38 (f) ve tornavida ile sabitlenir.

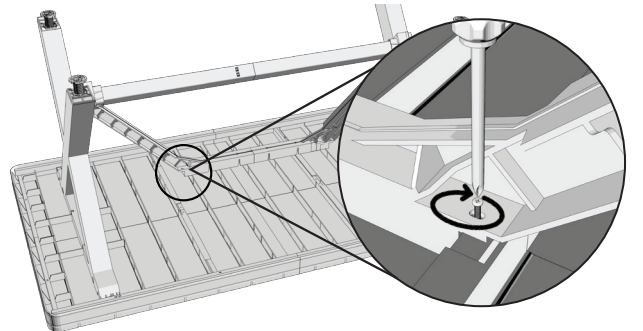

6 Ayak Destek Parçası köşesinde bulunan vida yerlerinden 2 adet 3.9x22 vida (e) ve tornavida ile sabitlenir. (Bu işlem her iki ayak için uygulanır.)





Care and Cleaning
Instructions



Assembly
Video


Table Maroon Assembly Guide

Retain for future reference. Read carefully before use.

Content



a) 1 piece of Table Top

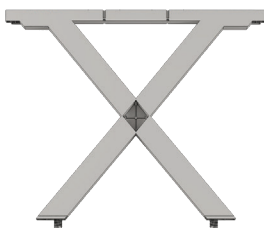


b) 2 pieces of Table

d) 8 pieces of
screw 3.9x18

e) 4 pieces of
RSYB screw
3.9x22


f) 18 pieces of
screw 3.9x38

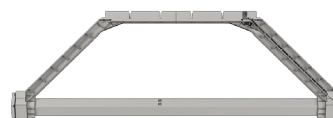


c) 1 piece of Leg Support

g) 1 piece of Allen


h) 8 piece of Washer

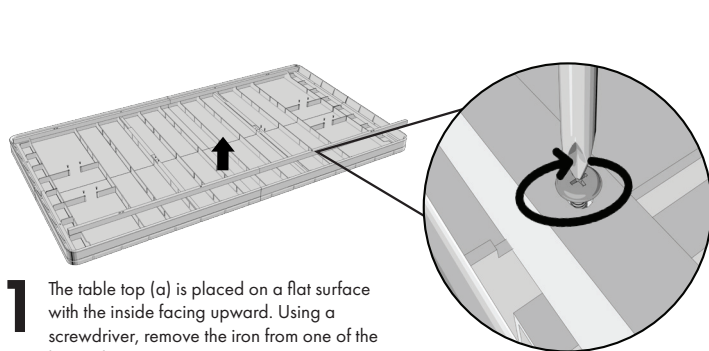


1 The table top (a) is placed on a flat surface with the inside facing upward. Using a screwdriver, remove the iron from one of the long edges.

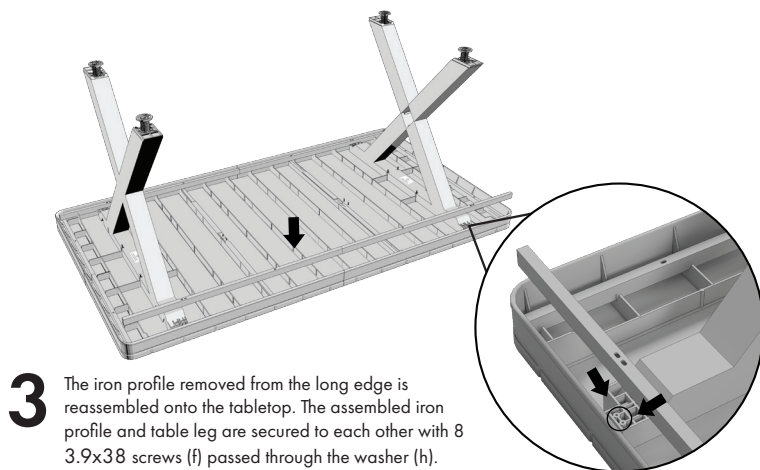


3 The iron profile removed from the long edge is reassembled onto the tabletop. The assembled iron profile and table leg are secured to each other with 8 3.9x38 screws (f) passed through the washer (h).

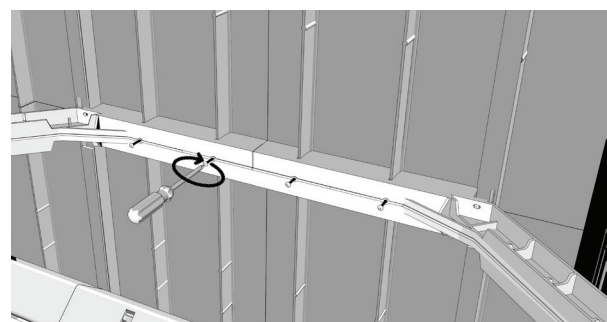


5 The points where the Leg Support Piece contacts the table top are secured with 3 3.9x38 screws (f) and a screwdriver.

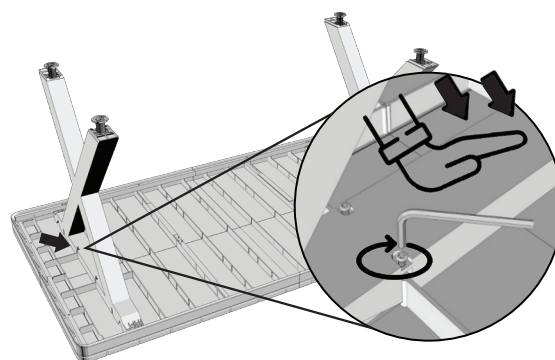

2 The table legs (b) are placed on the part indicated in the diagram on the tabletop. Apply pressure to the label located in the area where the screws will be installed, ensuring that the screw holes align, and then secure with 4 3.9x18 screws (d) using an Allen wrench (g). (This process is applied to both legs.)

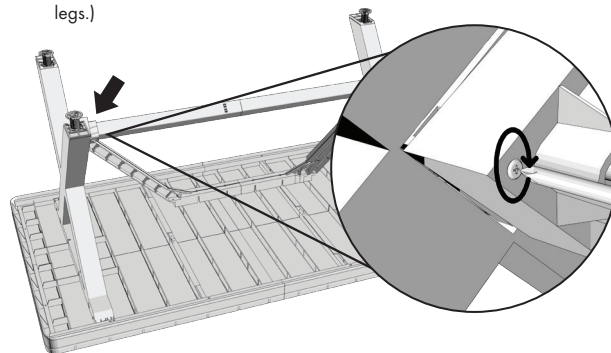

4 The Leg Support Piece (c) is inserted into the slots located inside the legs at the center point. The indicated part of the Leg Support Piece is secured with 3 3.9x38 screws (f) and a screwdriver. (This process is applied to both legs.)

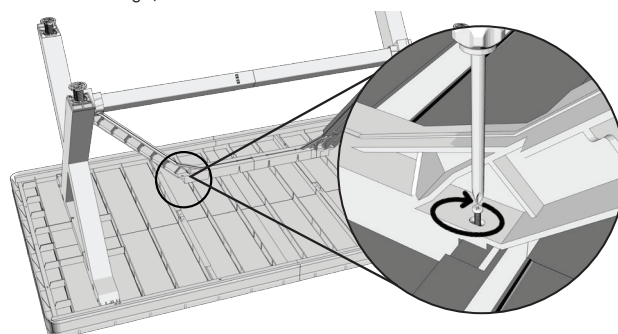

6 The screw (e) located at the corner of the Leg Support Part is fastened using two 3.9x22 screws (e) and a screwdriver. (This process is applied to both legs.)