



Temizlik ve Bakım
Talimatı



Moon Sabit Ayak Montaj Manueli

Kurulum
Videosu


İçerik

a) 1 ad. Masa İstavroz



☐ İstavroz | Küçük ☐ İstavroz | Büyük

b) 1 ad. Masa Ayağı



☐ Moon Ayak | Küçük



☐ Moon Ayak | Büyük

c) 1 ad. Alüminyum Boru



d) 1 ad. Ağırlıklı Saplama



e) 1 ad. Pul



f) 1 ad. Fiberli Somun




g) 1 ad. Somun




1 Saplama üzerinde bulunan fiberli somunu(f) ve pulu(e) çıkarın.




2 Saplamanın(d) uzun kenarını istavrozun merkezinde saat yönünde döndürerek yerleştirin ve saplama üzerindeki somunu(g) ters yönde 17'lik anahtar ile döndürerek istavroz ve saplamayı sabitleyin.

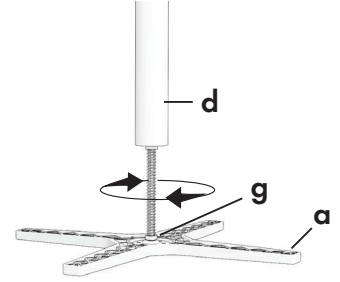

3 Alüminyum boruyu(c) saplamaya geçirin. Daha sonra sırasıyla masa ayağını(b) pul(e) ve fiberli somunu saplamaya takın.

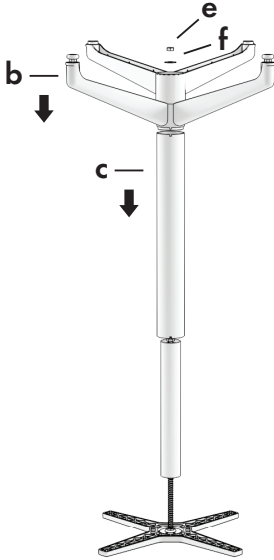


4 Somunu(f) 17'lik anahtar ile sabitleyin.

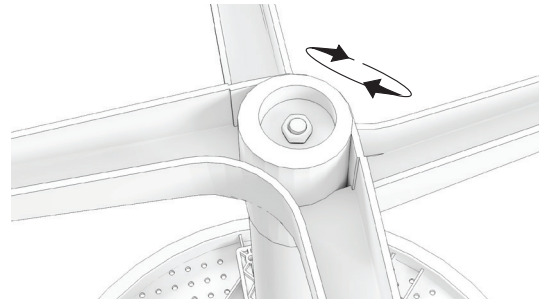


Şablonlar

Vidalar sadece 12 mm kalınlıktaki compact masa tablası için uygundur, dübelsiz montaja uygun değildir.
Lütfen 69x69, 69Ø ve 60Ø tablalar için Küçük İstavroz, 77x77, 80x80 ve 77Ø tablalar için ise Büyük İstavroz kullandığınızdan emin olunuz.


69x69

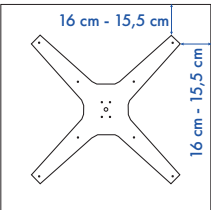


77x77

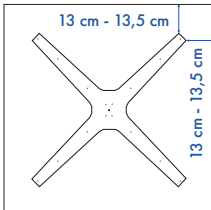


80x80

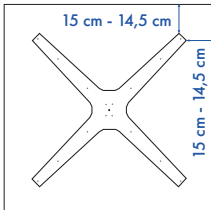


60Ø

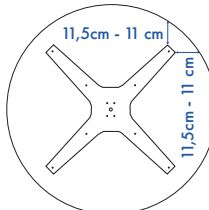

69Ø

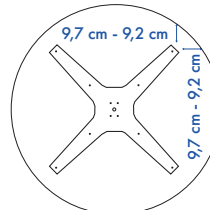

77Ø

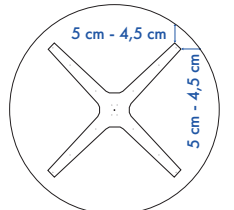



Care and Cleaning
Instructions



Moon Fixed Leg Assembly Guide

Assembly
Video


Content

a) 1 pc. Table Cross




☐ Cross | Small ☐ Cross | Large

b) 1 pcs. Table Leg



☐ Moon Leg | Small



☐ Moon Leg | Large

c) 1 pc. Aluminum Tube



d) 1 pc. Weight Mounted Driftbolt



e) 1 pc. Washer



f) 1 pc. Fiber Nut




g) 1 pc. Nut




1 Remove the fiber nut (f) and washer (e) on the pin.




2 Place the long edge of the peg (d) in the center of the cross clockwise and tighten the nut (g) on the peg counterclockwise with a 17mm wrench to secure the cross and the peg.

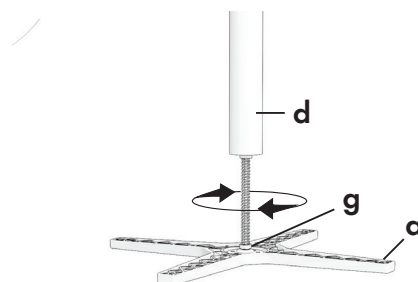

3 Pass the aluminum tube (c) through the peg. Then, sequentially attach the table leg (b), washer (e), and fiber nut onto the peg.

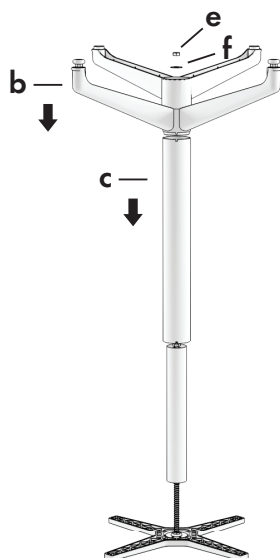


4 Tighten the nut (f) with a 17mm wrench.

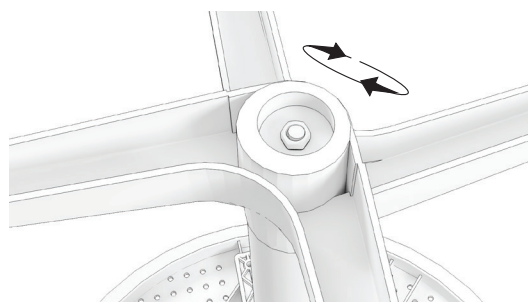


Templates

The screws are only suitable for compact tabletops with a thickness of 12 mm and are not compatible with dowel-free assembly. Please ensure you use the Small Cross-base for 69x69, 69Ø and 60Ø tabletops, and the Large Cross-base for 77x77, 80x80, and 77Ø tabletops


69x69

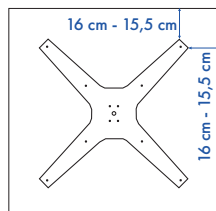


77x77

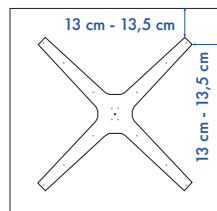


80x80

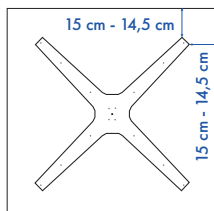

60Ø

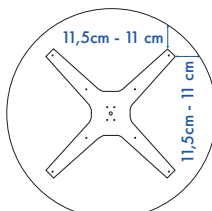

69Ø

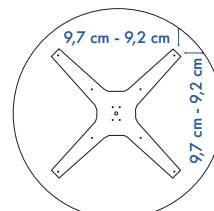

77Ø

