



Temizlik ve Bakım
Talimatı




Montaj
Videosu

Ivy Masa Montaj Manueeli


Lütfen ileride başvurmak üzere saklayınız ve kullanmadan önce dikkatle okuyunuz.

İçerik

a) 1 ad. Masa Tablası

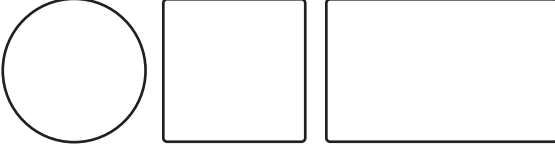


b) 2 ad. Masa Ayağı

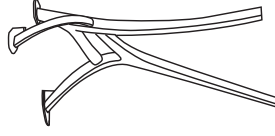


c) 12 ad. M6x12 Çap 10
Bombe Başlı Civata




d) 2 ad. Alüminyum Profil
(77x120 & 80x140 için)




1 Tablayı(a) düz bir zemine ters olarak yerleştirin.

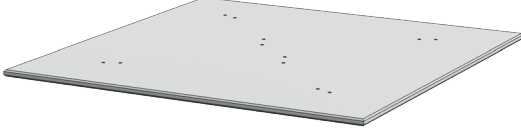

2 1 ad. Masa ayağını (b) tablaya deliklere uyacak şekilde yerleştirin ve her üç uçta bulunan vida deliklerine birer adet M6x12 Civata (c) yerleştirin ve yarım sıkarak tutturun.

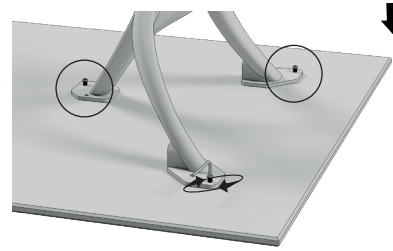


3 Kalan M6x12 civataları (c) yerine oturtun ve yerine oturttuğunuz civataları (c) tamamen sıkın. Son olarak yarım sıkılan civataları da (c) tamamen sıkın.

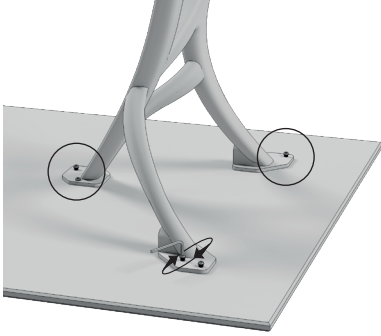

4 Profillerin uçlarını sabitlenen ayağa geçirin. Daha sonra sabitlenmemiş ayağı profilin üzerine geçirin.




5 2. ve 3. adımları tekrarlayıp kurulumu sonlandırınız.

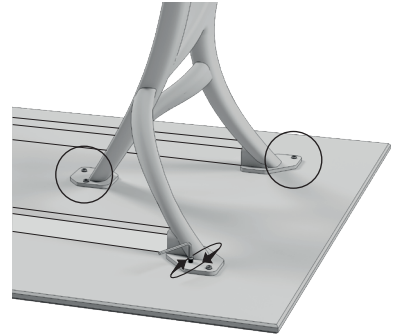


Şablonlar

Vidalar sadece 12 mm kalınlıktaki compact masa tablası için uygundur, dübelsiz montaja uygun değildir.


77x77

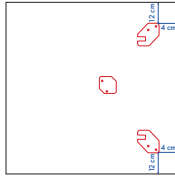


77x120

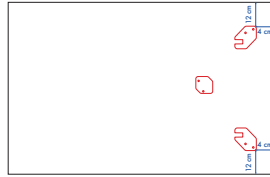


Ø77

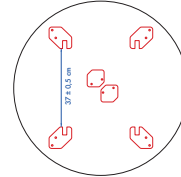


90x90

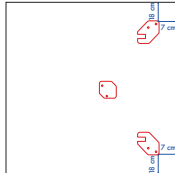

80x140

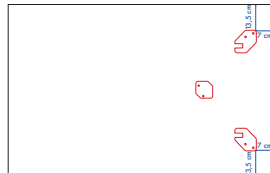

Ø90

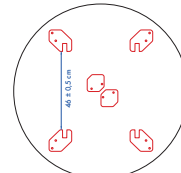



Care and Cleaning
Instructions




Assembly
Video

Table Ivy Assembly Guide


Retain for future reference. Read carefully before use.

Content

a) 1 pc. Table Top

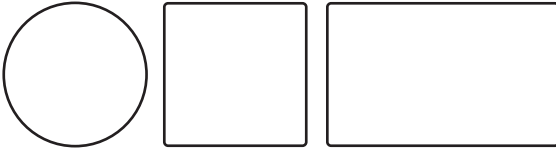



b) 2 pcs. Table Leg

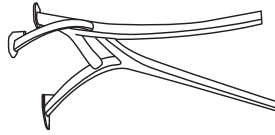


c) 12 pcs. M6x12 Diameter 10 Round Head Bolt




d) 2 pcs. Aluminum Profile (for 77x120 & 80x140)

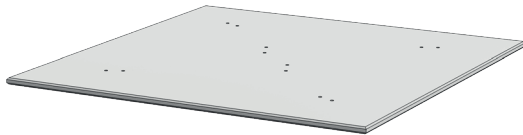


1 Place the tabletop (a) upside down on a flat surface.

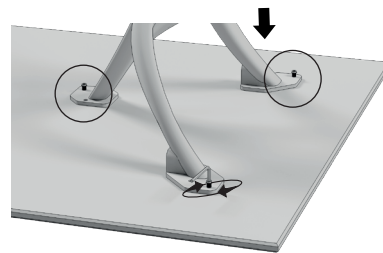


2 Position one table leg (b) onto the tabletop, aligning it with the pre-drilled holes. Insert one M6x12 bolt (c) into each of the three holes at the ends and tighten them halfway to hold in place.

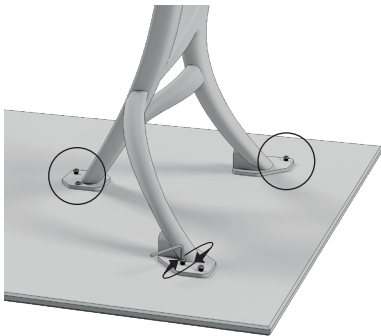

3 Insert the remaining M6x12 bolts (c), then fully tighten all the bolts that were previously inserted. Finally, fully tighten the bolts that were initially tightened halfway.

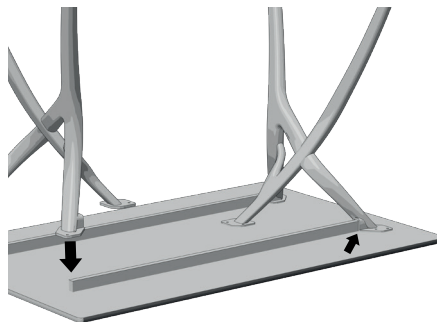

4 Insert the ends of the aluminum profiles into the fixed leg. Then slide the unfixed leg onto the opposite ends of the profiles.

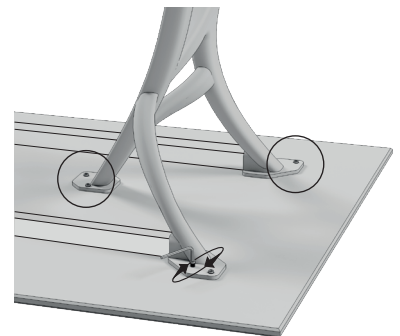


5 Repeat steps 2 and 3 to complete the assembly.


Templates

The screws are only suitable for 12 mm thick compact tabletops and are not suitable for installation without dowels.


77x77

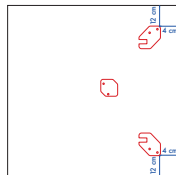


77x120

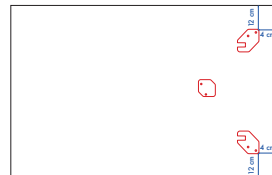


Ø77

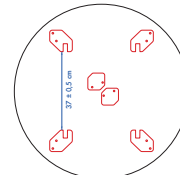

90x90

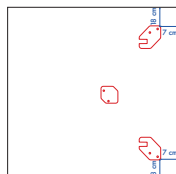

80x140

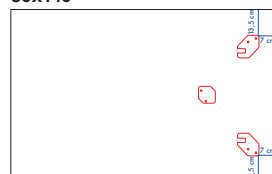

Ø90

