



Temizlik ve Bakım
Talimatı





Montaj
Videosu


Snap Masa Montaj Manueeli

Lütfen ileride başvurmak üzere saklayınız ve kullanmadan önce dikkatle okuyunuz.


İçerik

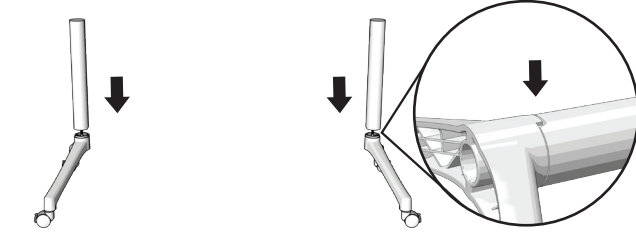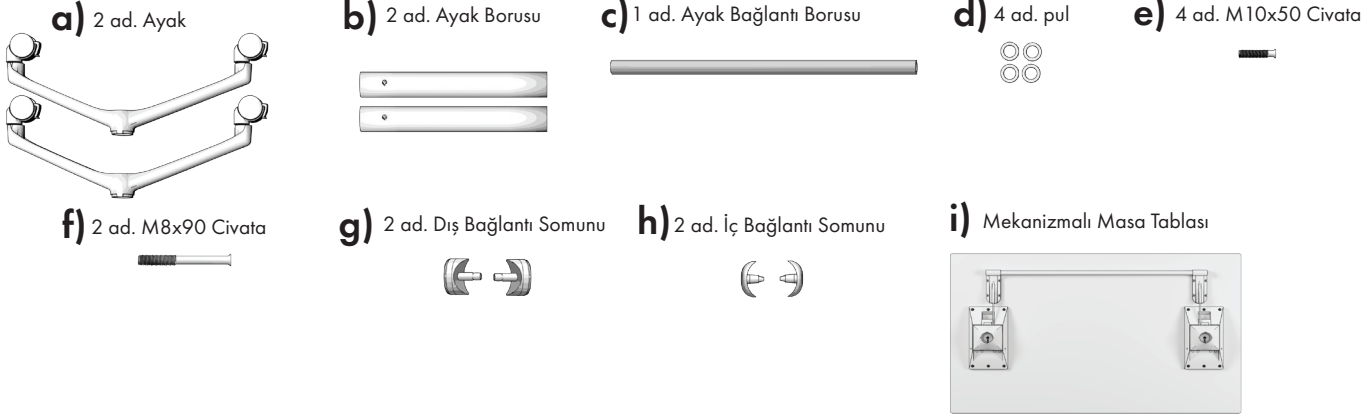


1 Ayak borularını (b) ayağa çentiğe dikkat ederek (a) geçirin.

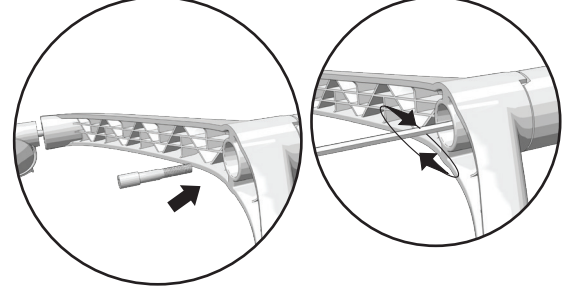


2 Önce pul (d) sonra M10x50 civata (e) takarak uygun el aleti ile (8mm alyan) sıkın.

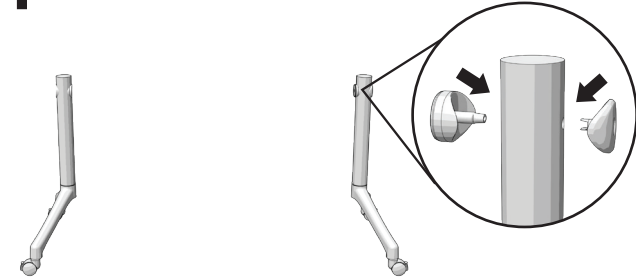


3 Dış bağlantı somununu (g) ve iç bağlantı somununu (h) ayak borusundaki (b) yerlerine takın.

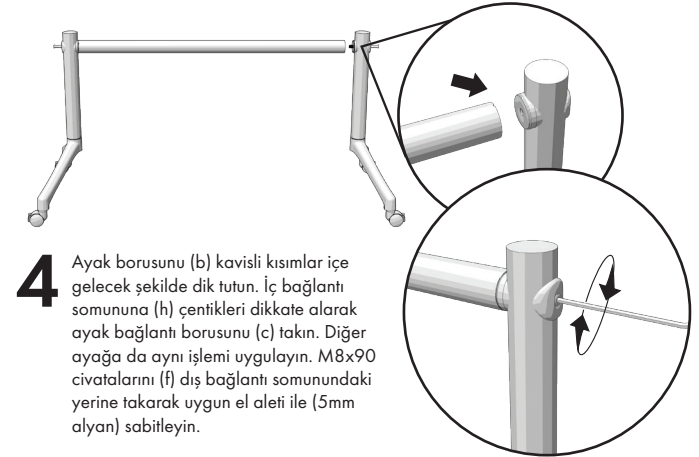

4 Ayak borusunu (b) kavisli kısımlar içe gelecek şekilde dik tutun. İç bağlantı somununa (h) çentikleri dikkate alarak ayak bağlantı borusunu (c) takın. Diğer ayağa da aynı işlemi uygulayın. M8x90 civatalarını (f) dış bağlantı somunundaki yerine takarak uygun el aleti ile (5mm alyan) sabitleyin.

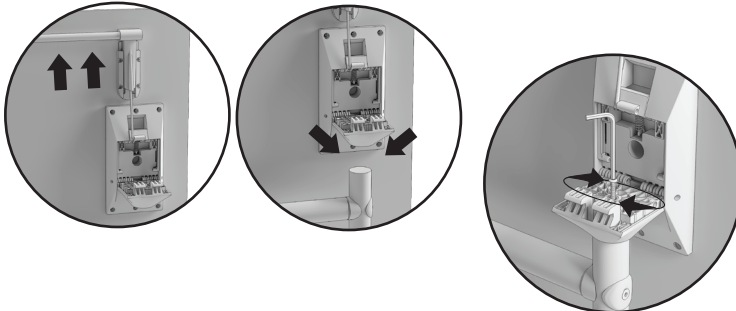

5 Mekanizmalı masa tablasının mekanizmasını mekanizma borusunu üste doğru çekerek açık hale getirin. Açık hale getirdiğiniz mekanizmalı masa tablasını ayağa uygun yere gelecek şekilde yerleştirin. Önce pulu (d) sonrasında M10x50 civatayı (e) mekanizmalı masa tablasındaki uygun yere geçirin ve uygun el aleti ile (8mm alyan) sıkın.

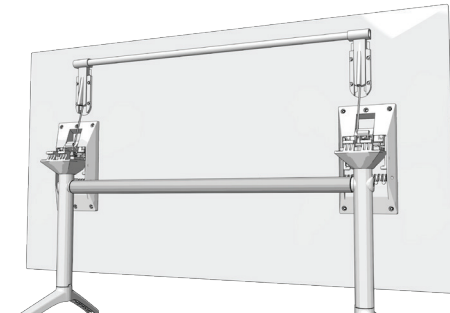

! Mekanizma borusunu yukarı çekerek masayı açık ya da kapalı konuma getirebilirsiniz.





Care and Cleaning
Instructions









Assembly
Video



Table Snap Assembly Guide

Retain for future reference. Read carefully before use.



Content

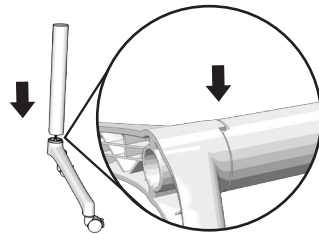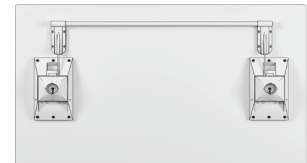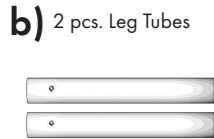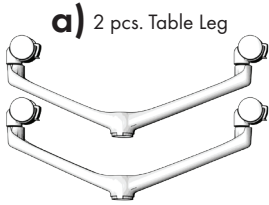


- 1** Insert the leg tubes (b) into the leg (a), paying attention to the notch.

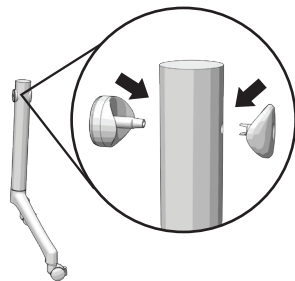





- 3** Attach the outer connection nut (h) and the inner connection nut (i) to their designated places on the leg tube (b).

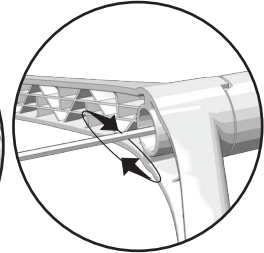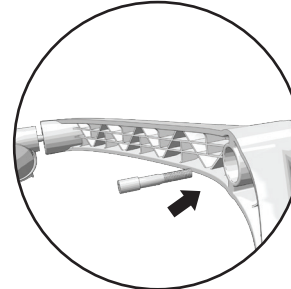


- 2** First, place the washer (e), then the M10x50 bolt (f), and tighten with the appropriate hand tool (8mm Allen wrench).

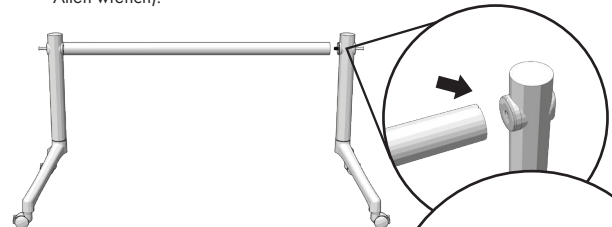

- 4** Keep the leg tube (b) upright with the curved parts facing inward. Attach the leg connecting tube (d) to the inner connection nut (i), considering the notches. Apply the same process to the other leg. Secure the M8x90 bolts (g) by placing them in the designated area of the outer connection nut using the appropriate hand tool (5mm Allen wrench).

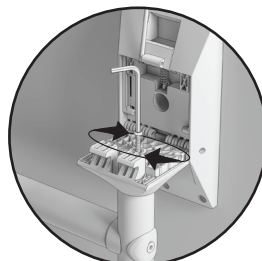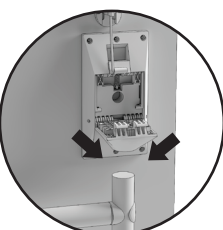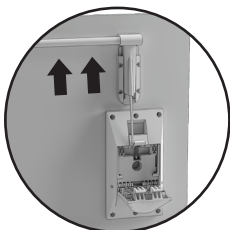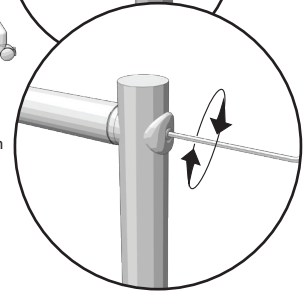

- 5** Open the mechanism of the extendable table by pulling the mechanism tube upwards. Place the opened extendable table onto the leg in a suitable position. Insert the washer (d) first, then the M10x50 bolt (e) into the designated place on the extendable table, and tighten it with the appropriate hand tool (8mm Allen wrench).

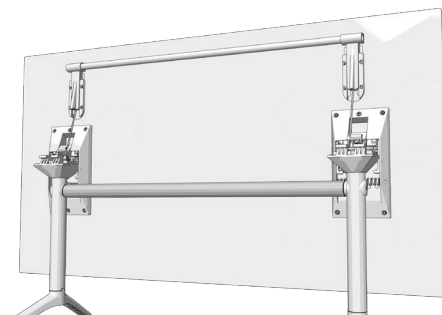

! You can raise the mechanism tube (i) to open or close the table.